 





FOOD STRAINER MOTOR

Instruction Manual

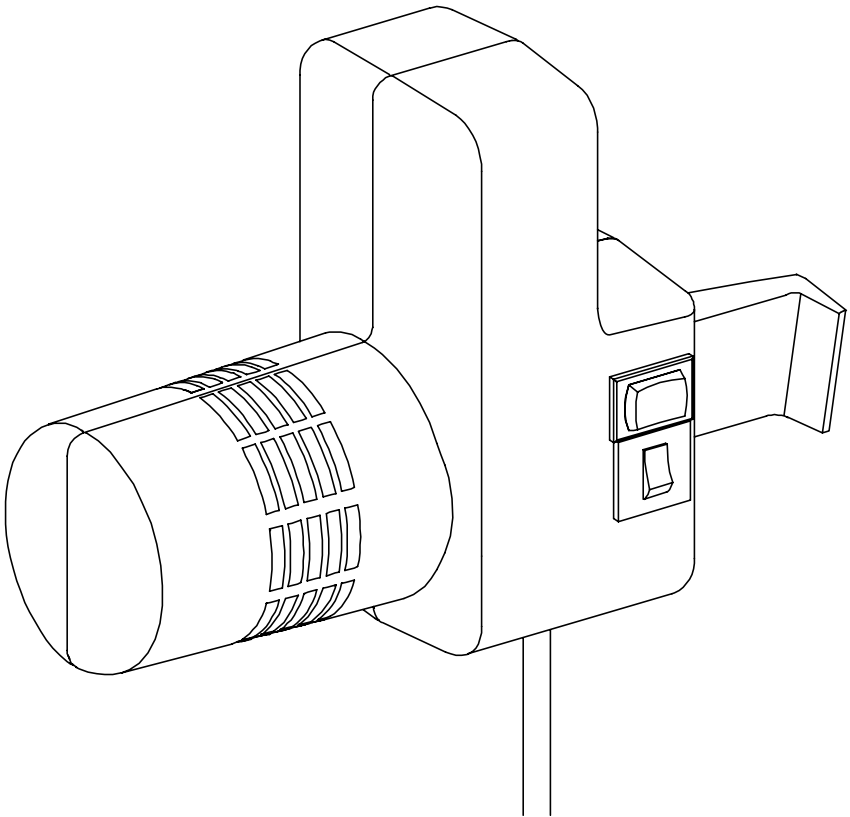

 FOOD STRAINER MOTOR VKP250-M2

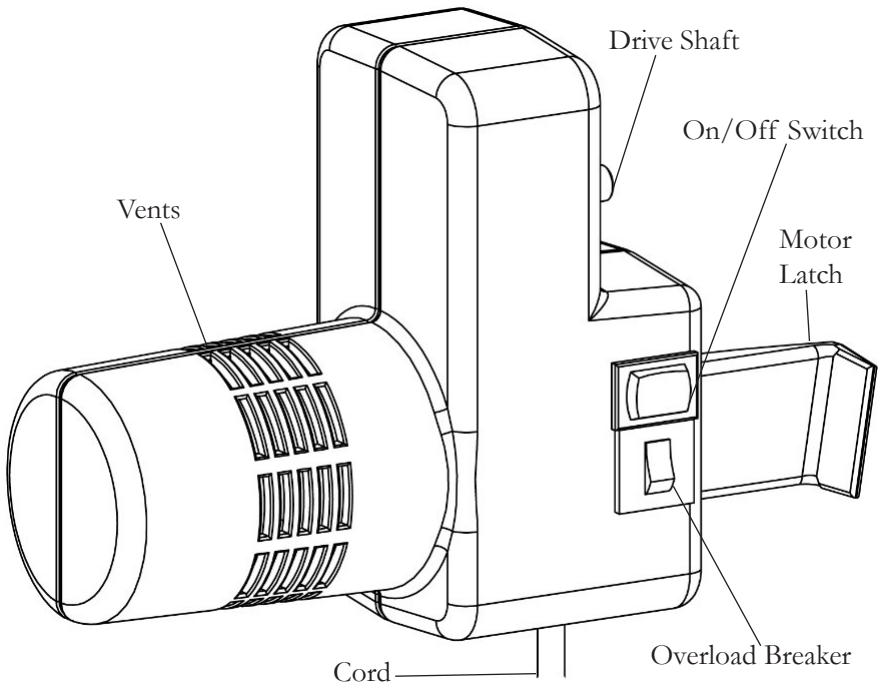

Features:

- Installs quickly and easy to use.
- Energy efficient and durable.
- High torque power combined with all metal gears provide years of reliable service.
- Very low power consumption keeps your power bill low and allows for worry free use with backup emergency power such as generators or a battery powered electrical inverter.
- Motor specifications: 120 VAC, 60 Hz, 90 Watts.

IMPORTANT SAFETY INSTRUCTIONS

WARNING! Failure to follow these safety instructions correctly will lead to a risk of fire, electric shock or personal injury.

 
When using electric appliances, basic precautions should always be followed, including the following:

- **Read and follow all instructions before operating the motor.**
- Connect motor to a properly grounded outlet only (See ‘Grounding Instructions’).
- Do not use electrical outlet adapters with this appliance.
- Do not operate if the cord or plug is damaged, or after the appliance malfunctions, or is dropped or damaged in any way. Return the appliance to the manufacturer for examination, repair, or electrical or mechanical adjustment.
- Do not disassemble. The motor must be serviced by qualified technicians only.
- To disconnect the motor, turn all controls to the off (“O”) position, then remove the plug from the outlet.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not leave the motor plugged in when not in use and before servicing or cleaning.
- Keep the motor unplugged and make sure the switch is in the off (“O”) position when installing or uninstalling from, the food strainer.
- Never turn on the motor when the strainer is empty.
- Do not use the motor when processing frozen foods or fruits with pits.
- To reduce the risk of electric shock, do not immerse the motor in water or other liquid. Do not place or store the motor where it can fall or be pulled into a tub or sink.
- Children should only use the Food Strainer under adult supervision.
- NEVER put hands or foreign objects in the strainer hopper; use the food pusher, only.
- Never use the strainer without the hopper in place.
- Do not cover the motor ventilation holes.
- Make sure the motor is attached to the food strainer properly before operating (See ‘Installation Instructions’).
- Only use electric motor (model VKP250-M) with Food Strainer (model VKP250).
- This appliance is for household use only.

GROUNDING INSTRUCTIONS - (See diagrams below)

THIS APPLIANCE MUST BE GROUNDED. In the event of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

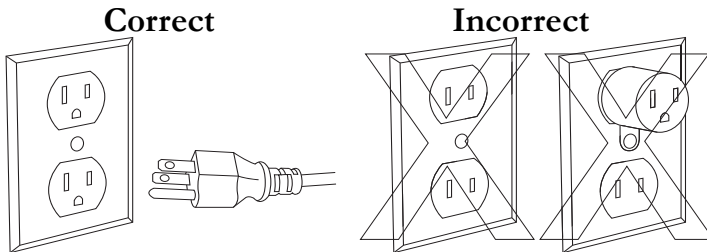

Circuit Breaker Instructions:

 
The motor includes a resettable overload breaker to prevent risk of personal injury or food strainer damage.

Instructions for resetting overload breaker: Turn the switch to the off (“O”) position and unplug the motor from the outlet. Remove the motor from the food strainer. Wait 10 minutes for the motor to cool, then manually reset the breaker by pressing in on the top of the breaker until it locks.


Important: Before reinstalling the motor, check the food strainer operation by installing the handle and manually operating the food strainer to make sure the spiral isn’t jammed or overly hard to turn.

Caution: If the breaker trips immediately after plugging in or turning on the motor, do not bypass the breaker and do not use the motor. Contact customer service at 866-257-4741.

Power Switch

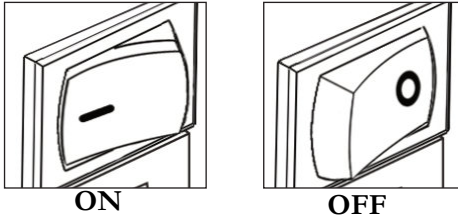

Overload Breaker

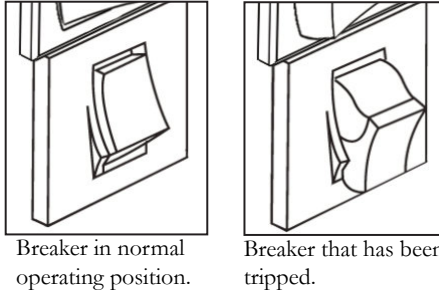 


Motor Use Instructions

Make sure you have read the **Important Safety Instructions** before installing the motor.


Installation Steps:

 1. Remove the motor from the packaging and make sure the power switch is in the off (“O”) position (see diagram above) and the motor is unplugged.
2. Use the crank handle to position the strainer shaft so the motor shaft can fit in (see diagram below).

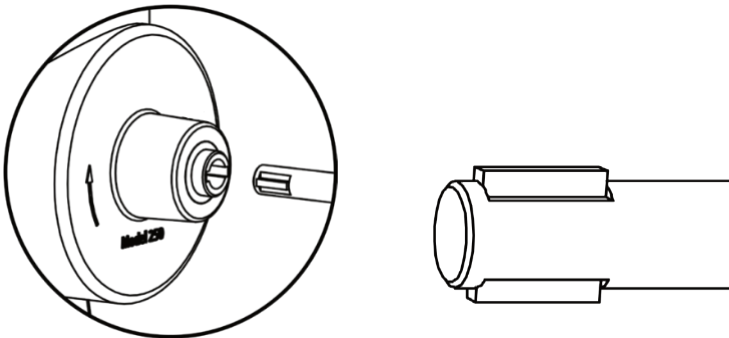


Strainer notches should line up with motor drive shaft keys.

 3. Once the shaft is positioned correctly, insert the motor shaft into the food strainer shaft by pushing forward on the motor.
4. With the shafts connected, twist the motor counter-clockwise (see diagrams below).

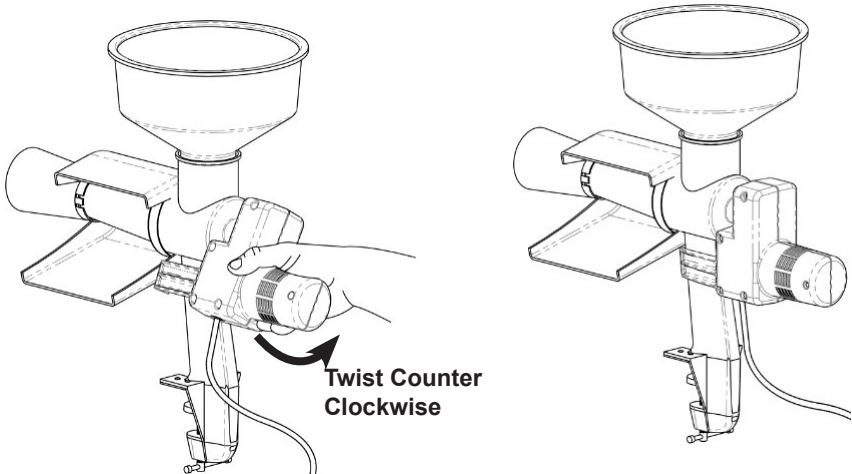


 
5. You will know the motor is correctly in place when the motor latch is secure around the strainer body (see diagram below) and the drive shaft is **FULLY** inserted in strainer.

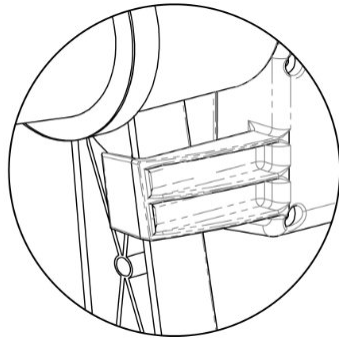



6. Make sure the power switch is still in the off (“O”) position and plug the motor cord into a correct power source.
7. **WARNING! - Do not turn on the motor at this point! You will damage your strainer by running it when the screen and spiral are dry.**
8. Now that the motor is connected properly and plugged in, you can put your prepared produce into the hopper.
9. You may now turn the power switch to the on (“I”) position. **Never use any tool except the food pusher in the hopper. Keep hands, hair, clothing and any other objects, except the pusher, away from the hopper opening at all times.**

Removal Steps:

  1. To remove the motor, make sure the power switch is in the off (“O”) position and the cord is no longer in the outlet.

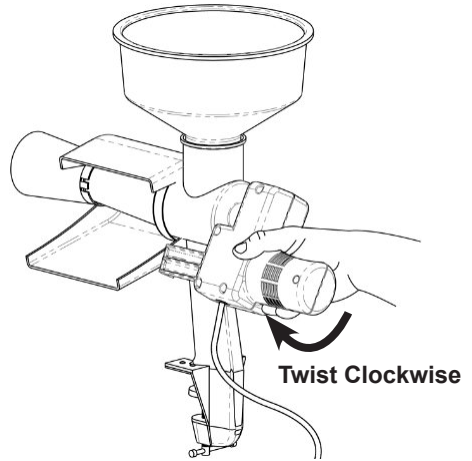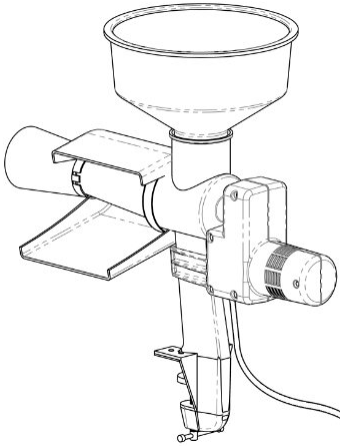

  2. Firmly grasp the motor and twist in a clockwise direction to release the motor latch from the body of the strainer. (See diagram above).
3. The motor may be tight and hard to remove. If so, rock it up and down gently as you pull straight back. (See diagram below).

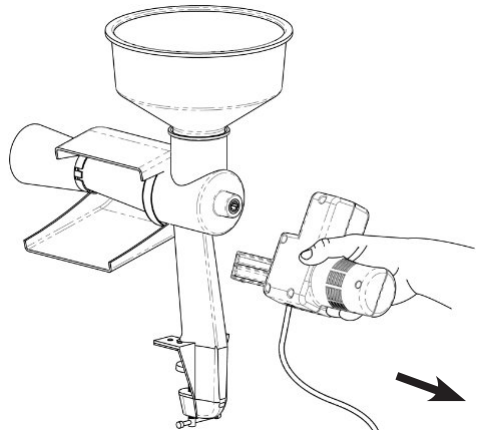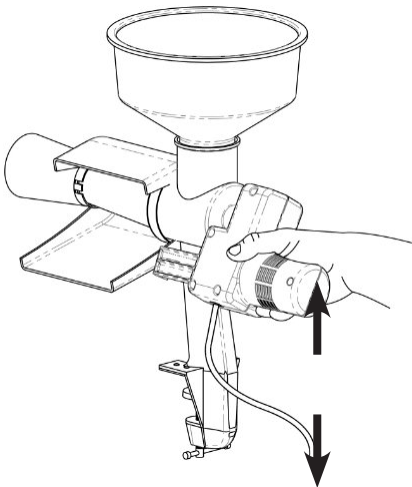

4. To store, place the motor back in its original box and packaging and keep it in a cool, dry place, away from moisture and extreme temperatures.

Product Warranty

Register your warranty online at:
VKPbrands.com/Warranty

Model VKP250-M2 - Food Strainer Motor Warranty: 5 years

We are confident in the quality of our products and back each one with a limited warranty for the length of time specified above. Should you experience any problems with your product, please contact our Customer Service Department.

All warranty claims must be accompanied by a proof of purchase and are only valid if the appliance has been operated within the U.S. or Canada and used for its intended purposes. These products are for household use only.

Items Not Covered:

- Return shipping costs or returned items lost in transit.
- Damages to the product due to accident, misuse, abuse, negligence, or if the appliance has been altered in any way.
- Products used outside of the United States or Canada.

VKP™

B R A N D S

1804 Sandhill Rd

Orem UT, 84058

Phone: **866-257-4741**

VKPbrands.com